 




SORA

Hairdryer

Instruction Manual

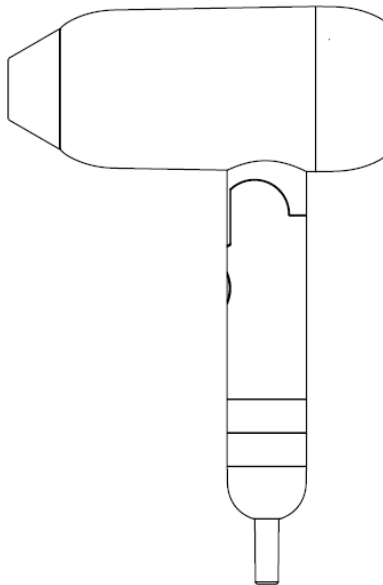

Information in this manual is subject
to changes without notice.
Edition: 2026-02

Please read the manual carefully before using the product

READ THESE INSTRUCTIONS CAREFULLY BEFORE USAGE

WARNING: To avoid injury, electric shock, or fire caused by improper use, carefully read and follow all safety instructions below.

1. Read the instructions carefully and retain this manual for future use.
2. Ensure the appliance's rated voltage matches the supply voltage before use.
3. Inspect the power cord regularly. If damaged, it must be replaced by the manufacturer, its service agent, or a qualified technician.
4. Do not pull, crush, or overload the power cord. Never use the hairdryer with a damaged cord or plug. Use only a grounded outlet.
5. Do not connect other appliances to the same outlet to avoid overheating or fire.
6. Keep the air inlet and outlet unblocked during use to prevent overheating and ensure safe operation.
7. Never disassemble the hairdryer to avoid hazards.
8. Do not use near flammable substances such as petrol, paint, thinners, or sprays to prevent fire or explosion.
9. Never immerse the appliance, cord, or plug in water, and avoid using near bathtubs, showers, basins, or other vessels containing water.
10. Do not use this appliance near bathtubs, showers, basins, or other vessels containing water.



11. Store the hairdryer without wrapping the cord around the body to prevent cord damage, short circuits, or fire.
12. If dropped, damaged, or making abnormal sounds, do not use the hairdryer. Do not drag the appliance on the floor.
13. Use the hairdryer only for drying hair. Do not use it for clothing or other items.
14. During use, the air outlet and nozzle may become hot—avoid touching to prevent burns.
15. Do not use the hairdryer in humid environments.
16. This product is intended for household indoor use only. Do not use in bathrooms or outdoors.
17. Always unplug after use. Do not pull the cord; grasp the plug when unplugging.
18. The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
19. Avoid storing the product in highly humid environments to prevent electric shock or fire due to a short circuit.
20. To avoid potential damage and electric shock, do not expose the hairdryer to water or operate it with wet hands.

Product Overview

DC powered hairdryer uses a direct-current motor to deliver consistent airflow with lower energy consumption and reduced noise. It offers fast drying performance while being lighter and more compact than conventional AC motor hairdryers. This makes it well suited for frequent use environments such as hotels, gyms, and residential settings.

TECHNICAL SPECIFICATIONS

Supply voltage: 220-240V, 50/60Hz

Product code: 8222494

Power: 1875W

Fan speed modes: 2

 
Power cord length: 2m

Temperature mode: 3



Cold shot: YES

Motor type: DC Motor

Noise emission: <90 db

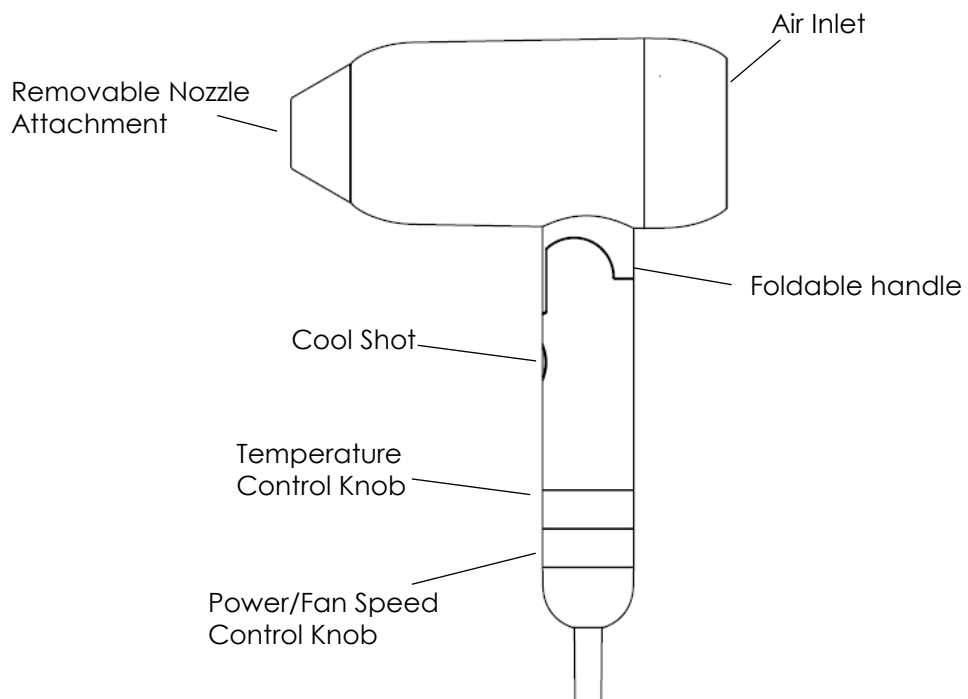

Functions

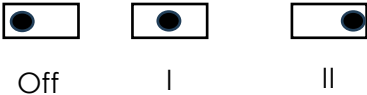Power switch/Fan Speed Knob (Located at handle) 0= Off I= Level 1 II= Level 2	
Temperature Knob	
Cold Shot	NA.
Ionic Function	Equipped with built-in negative ions to minimize frizz and improve hair shine.
Lightweight Design	Perfect for travel and daily use.
Nozzle Attachment	360° detachable nozzle attachment for precise styling

Power/Fan Speed Knob

1. Turn the power/fan speed knob to desired level to turn ON.

Accessories

1. Attach or remove plug-and-play accessories easily , they rotate 360°.
2. Ensure the hair dryer is off before attaching or removing accessories.

Airflow & Temperature Control Knob

1. Turn the airflow knob to toggle through 2 airflow levels.
2. Adjust temperature knob (3 levels, incl. cool) and speed (2 levels) using the control knob.

Shutdown

1. After use, switch off the hairdryer temperature knob to '1' , fan speed knob to '0' and proceed to turn off the mains and unplug the power cable.

Attachments (Included)

	Nozzle for targeted styling	Concentrates the airflow into a narrow stream for precise control, letting you dry and style specific sections of hair more effectively.
---	-----------------------------	--

FAULT	SOLUTION
The hairdryer does not turn ON	Check that the main supply is switched on
	Ensure the power plug is properly connected
	Ensure the hairdryer power switch is turned on
Hairdryer is not producing hot air.	Turn the temperature knob on the hairdryer to adjust the temperature
	Ensure temperature knob is selected
Hairdryer is not producing any air	Switch off the hairdryer, clean the back cover, and ensure the air inlet and outlet are clear before turning it on again.

STORAGE

1. Unplug the hairdryer from the power outlet after use.
2. Allow the unit to cool before removing any attachment nozzles.
3. Use the provided cable organizer to coil the cords neatly. Do not bend, twist, or crush the wires. Store them in a dry place and keep the cables relaxed to prevent stress or damage

CARE & MAINTENANCE

1. Remove the nozzle attachment and clean with a damp cloth.
2. Do not use harsh, abrasive cleaners or solvents.
3. Never immerse the hairdryer in water or other liquids.
4. Do not drop, throw, or attempt to bend the hairdryer.
5. Do not attempt to disassemble the appliance.
6. After use, store the cord neatly to reduce stress on the wires.
7. Keep the hairdryer away from heat sources and direct sunlight.
8. Ensure both the air intake and outlet are clean and free of obstructions.
9. For storage, place the hairdryer flat, remove nozzle attachments, coil the cord neatly, and keep it in a dry area, such as a closet.

Warranty

A faulty connection or any damage resulting from the wrong usage, or which is in contradiction to the instructions in this leaflet will render the warranty void.

