


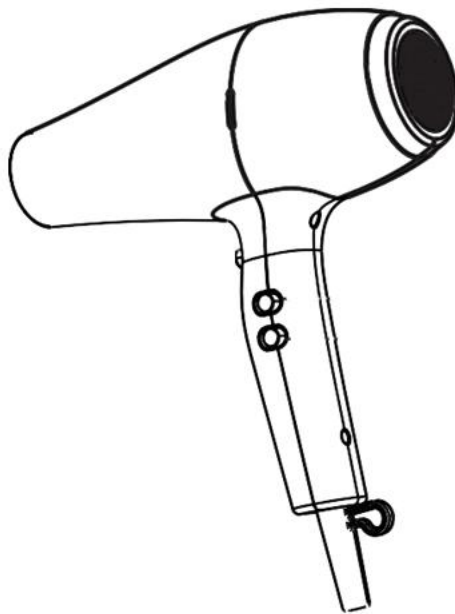

# **KAZE**

## **Ionic Hairdryer**

### **Instruction Manual**



Information in this manual is subject  
to changes without notice.  
Edition: 2025/11

Please read the manual carefully before using the product

## READ THESE INSTRUCTIONS CAREFULLY BEFORE USAGE

**WARNING:** To avoid injury, electric shock, or fire caused by improper use, carefully read and follow all safety instructions below.

1. Read the instructions carefully and retain this manual for future use.
2. Ensure the appliance's rated voltage matches the supply voltage before use.
3. Inspect the power cord regularly. If damaged, it must be replaced by the manufacturer, its service agent, or a qualified technician.
4. Do not pull, crush, or overload the power cord. Never use the hairdryer with a damaged cord or plug. Use only a grounded outlet.
5. Do not connect other appliances to the same outlet to avoid overheating or fire.
6. Keep the air inlet and outlet unblocked during use to prevent overheating and ensure safe operation.
7. Never disassemble the hairdryer to avoid hazards.
8. Do not use near flammable substances such as petrol, paint, thinners, or sprays to prevent fire or explosion.
9. Never immerse the appliance, cord, or plug in water, and avoid using near bathtubs, showers, basins, or other vessels containing water.
10. Do not use this appliance near bathtubs, showers, basins, or other vessels containing water.



11. Store the hairdryer without wrapping the cord around the body to prevent cord damage, short circuits, or fire.
12. If dropped, damaged, or making abnormal sounds, do not use the hairdryer. Do not drag the appliance on the floor.
13. Use the hairdryer only for drying hair. Do not use it for clothing or other items.
14. During use, the air outlet and nozzle may become hot, avoid touching to prevent burns.
15. Do not use the hairdryer in humid environments.
16. This product is intended for household indoor use only. Do not use in bathrooms or outdoors.
17. Always unplug after use. Do not pull the cord; grasp the plug when unplugging.
18. The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
19. Avoid storing the product in highly humid environments to prevent electric shock or fire due to a short circuit.
20. To avoid potential damage and electric shock, do not expose the hairdryer to water or operate it with wet hands.
21. When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.
22. For additional protection, the installation of a residual current device (RCD) have a rated residual operation current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.

## Product Overview

Powerful AC fast-drying hair dryer with built-in ionic technology for smooth, frizz-free hair. Adjustable heat and speed, detachable nozzle, and removable filter for effortless styling and maintenance. Includes a convenient hanging loop for easy storage.

## TECHNICAL SPECIFICATIONS

Supply voltage: 220-240V, 50/60Hz

Product code: 8222496

Power: 2200W

Fan speed modes: 2 ( Low, High)

Temperature settings: 3 ( Cool, Warm, Hot)

Cold shot: Yes


Removable filter: Yes

Removable nozzle: Yes

Dimensions (mm): H280/W210/D90

Hairdryer material: PA

Motor type: AC Motor

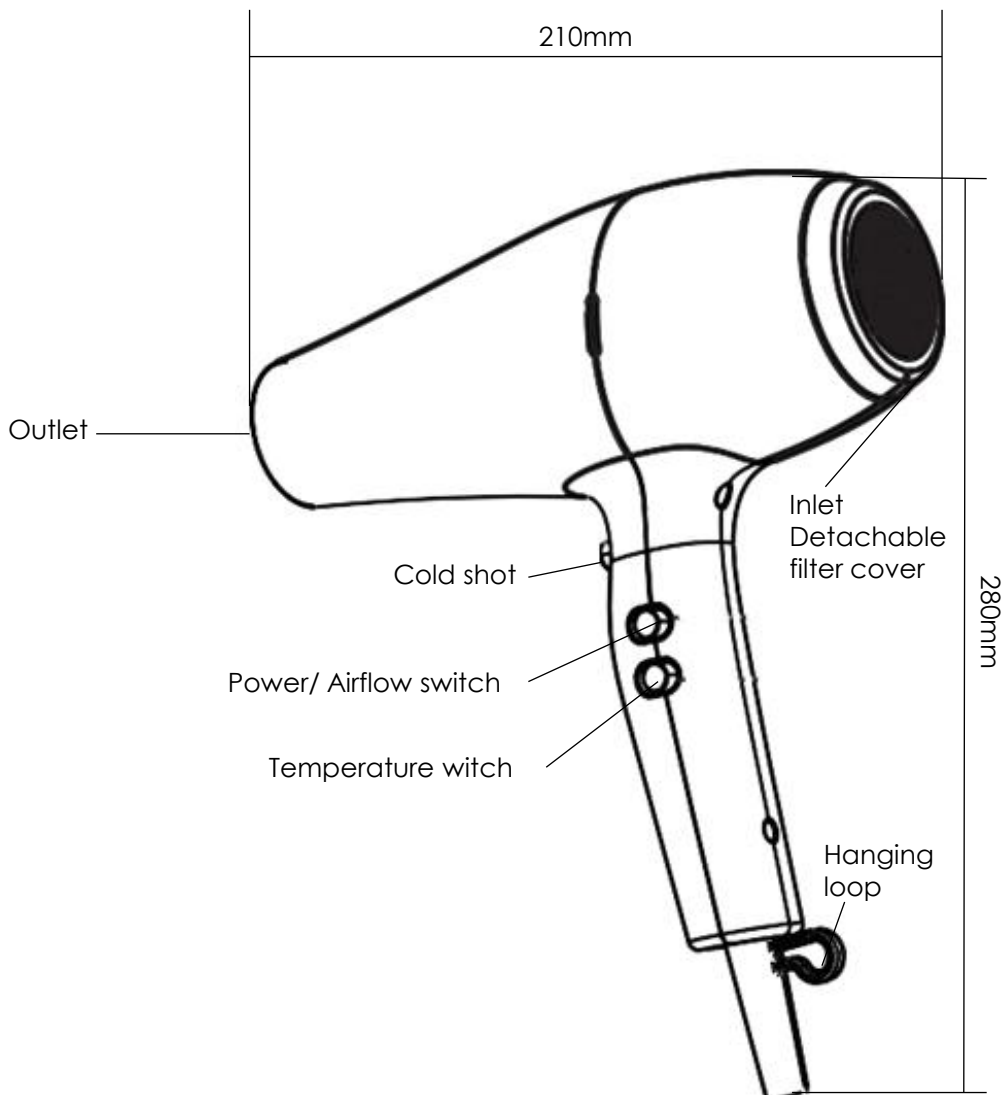

## Functions

Power/Air Flow Switch	Slide to select the desired wind speed (3 levels: Off ,Low, High)
Temperature Switch	Slide to select desired heat (3 settings: Cold, Warm, Hot)
Cold Shot	(Manual mode) Press and hold the button to switch to cool air. Release the button to return to the previous setting
Ionic Function	Equipped with built-in negative ions to minimize frizz and improve hair shine
Removeable Filter Cover	Convenient maintenance
Detachable Nozzle	Convenient plug-and-detach mechanism
Hanging Loop	Convenient storage

### Power/Air Flow Switch

1. Slide the power switch horizontally to 'Low' or 'High' to turn on the hair dryer, and back to 'Off' to turn it off.

### Accessories

1. Attach or remove plug-and-play accessories easily , they rotate 360°.
2. Ensure the hair dryer is off before attaching or removing accessories.

### Temperature Control

1. Slide the airflow control button to toggle through 3 airflow levels.
2. Adjust temperature (4 levels, incl. cool) and speed (3 levels) using the control buttons.
3. To use cool air while heating, press and hold the cold shot button.

### Cold Shot

1. The Cool Shot releases a stream of cool air to set your style and add shine.
2. Press and hold to activate; release to return to the previous temperature.

### Shutdown

1. After use, slide the temperature button to 'Cool,' then switch the hair dryer's power to 'Off' and unplug the unit.

## Attachments (Included)

	Nozzle for targeted styling	Concentrates the airflow into a narrow stream for precise control, letting you dry and style specific sections of hair more effectively.
---	-----------------------------	--

<b>Problem Faced</b>	<b>Cause</b>	<b>SOLUTION</b>
The hairdryer does not turn ON	Unit is not connected to power source	Check that the main supply is switched on
	Power source is not turned ON	Ensure the power plug is properly connected
	Unit overheat	Unplug and allow unit to cool down before using again
Hairdryer is not producing hot air.	Temperature switch is not selected	Slide the hair dryer switch to either warm or hot
	Unit overheat	Unplug and allow unit to cool down before using again
Burning smell when using	Clogged filter	Turn off and unplug the hair dryer, remove the filter, and clean with a brush or cloth.

## **STORAGE**

1. Unplug the hairdryer from the power outlet after use.
2. Allow the unit to cool before removing any attachment nozzles.
3. Use the provided cable organizer to coil the cords neatly. Do not bend, twist, or crush the wires. Store them in a dry place and keep the cables relaxed to prevent stress or damage

## **CARE & MAINTENANCE**

1. Remove the nozzle attachment and clean with a damp cloth.
2. Do not use harsh, abrasive cleaners or solvents.
3. Never immerse the hairdryer in water or other liquids.
4. Do not drop, throw, or attempt to bend the hairdryer.
5. Do not attempt to disassemble the appliance.
6. After use, store the cord neatly to reduce stress on the wires.
7. Keep the hairdryer away from heat sources and direct sunlight.
8. Ensure both the air intake and outlet are clean and free of obstructions.
9. For storage, place the hairdryer flat, remove nozzle attachments, coil the cord neatly, and keep it in a dry area, such as a closet.

## **Warranty**

A faulty connection or any damage resulting from the wrong usage, or which is in contradiction to the instructions in this leaflet will render the warranty void.



This marking indicates that this appliance should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources.