



INSTRUCTION MANUAL



ORIENTAL ELECTRIC KETTLE

Model No.: 8661035

Before you connect this appliance to your power mains, read the Operating Instructions thoroughly. This is to avoid damage due to incorrect usage. Please pay special attention to the safety information. If you are handing over this appliance to a third party, these Operating Instructions must also be handed over.

SAFETY INFORMATION

1. Incorrect operation and improper handling can lead to faults in the appliance and may cause injuries to the user.
2. Improper usage or incorrect handling will void the warranty, and no liability can be accepted for any damage that may occur.
3. Before connecting the plug to the socket, please ensure that the electric current and mains voltage are suitable for use. You can check the power rating/nameplate on the underside of the appliance.
4. Place the kettle base away from damp surfaces and avoid water splashes.
5. Do not immerse the unit or mains plug in the water or other liquids. This will cause injuries or even death due to electric shock. However, if this should occur, remove the mains plug immediately and have the unit checked by a qualified electrical service provider before using it again.
6. Do not operate the appliance if the power cable or the power plug shows signs of damage. If the appliance has been dropped and damaged, do not use it until the appliance has been checked and repaired.
7. Ensure that the power cable does not hang over sharp edges to avoid damage. Keep it away from hot objects and open flames. Only pull it out of the socket by the plug and not by the cable.
8. Place the appliance on a stable level and heat-resistant surface, away from hot objects (e.g. hotplates) and naked flames.
9. You should never leave the appliance unattended during use.
10. Keep the appliance away from children to prevent hazards and injuries.
11. Use the kettle only with the base supplied. Do not use the base for any other purposes.
12. Never remove the kettle from its base while in operation. Always switch off the appliance first.
13. The kettle is for heating water only and not for other types of liquids. Do not use it for cooking.
14. Always ensure that the lid is closed when pouring the water out. Beware of scalding.
15. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.

This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices, and other working environments
- farmhouses
- By clients in hotels, motels, and other residential-type environments
- Bed and breakfast type environments.

16. The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction


17. Children must be supervised not to play with the appliance

If the kettle is overfilled, boiling water may be ejected.

CAUTION: Do not remove the lid while the water is boiling.

Ensure that the kettle is switched off before removing it from its base.

FUNCTIONAL CHARACTERISTICS

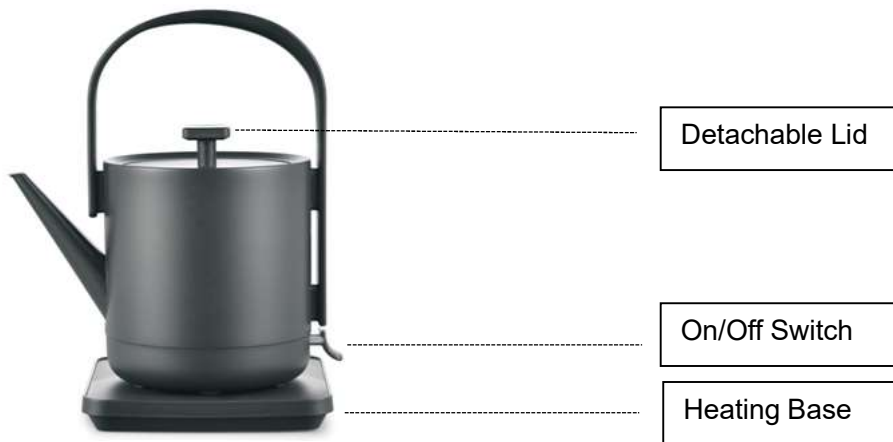

FIRST TIME USAGE

1. Remove all packaging material.
2. Clean the kettle by filling it with clean water and bringing it to the boil (see “Operation”).
Pour away the water then repeat the operation.

OPERATION

1. Wind out the main cord through the opening in the base. Do not over-extend. Connect the power plug to a suitable mains socket. Place the base on a flat surface.
2. Open the lid by pressing the lid release button and pour in the desired quantity of water. While doing so, watch the water level mark inside the appliance. Do not exceed the MAX mark.
3. Close the lid by pressing the cover down and ensure that the kettle is switched off before placing it on the base.
4. Press the switch down to the position “I”. The appliance will begin to operate, and the indicator light will come on.
5. When the water boils, the appliance will switch off automatically and the indicator light will go off.
6. You can pour the water out without opening the lid.
7. If you wish to stop the boiling process or interrupt it temporarily, switch the appliance off by pushing the switch upwards to the position “O” before removing the kettle from its base.

Note:

This appliance comes with a safety device that automatically switches off the heater element if the appliance is empty of water if it boils dry. In this case, let the appliance cool down completely before filling it with water again.

To prolong the life span of the kettle and prevent fire hazards, always ensure that the kettle is not turned on when not in use. It is best to always remove the power plug from the power socket when not in use.

CLEANING AND CARE

Please also observe the safety advice for this.

1. Always remove the plug from the main socket before cleaning the base. Let the kettle cool down completely.
2. Clean the outside of the kettle and the base with a soft damp cloth. Do not immerse in water.
3. Descale the kettle at regular intervals to preserve the quality of the kettle and taste of boiled water. Use a descaling agent 8882234, which can be obtained from JVD, and follow the instructions given.
4. Don't use any metal object or hard object to clean the kettle as this will damage the kettle and cause rust.

TECHNICAL DATA

ORIENTAL 0.6L KETTLE


Operating voltage: 220-240V~ 50/60Hz

Power consumption: 1000W

Dimensions: H247/W210/D115mm

Finish : Matt Black

Environment friendly disposal

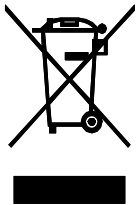

You can help protect the environment!
Please remember to respect the local regulations:
Hand in the non-working electrical equipment to
an appropriate waste disposal center

For further information, please contact:

JVD Technologies (Asia) Pte Ltd

56 Loyang Way #06-04, Loyang Enterprise Building, Singapore 508775

Tel: +65 6214 8550

www.jvd.com.sg