 
 


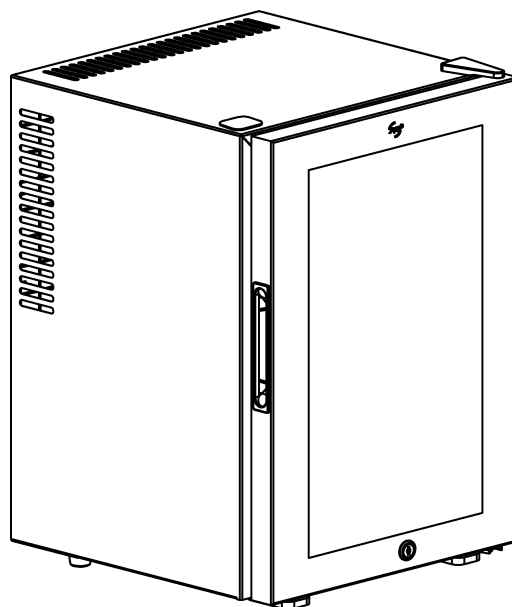

CM Minibar

(Thermo-Absorption minibar)

Instruction Manual

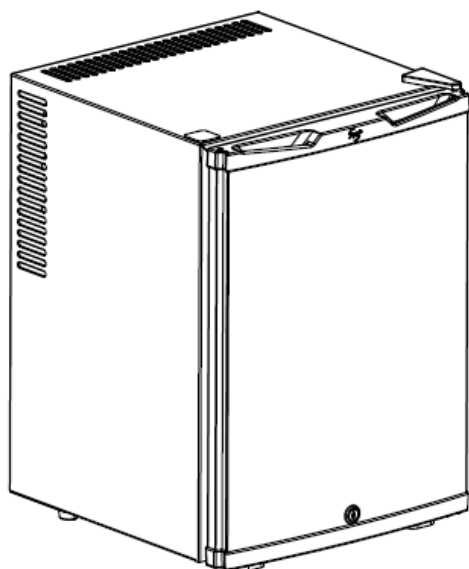

Model Numbers:

CM40

CM40 GD

Information in the manual is subject
to change without notice
Edition 2026/03

Please read the manual carefully before using the product.

READ THESE INSTRUCTIONS CAREFULLY BEFORE USAGE

IMPORTANT SAFETY PRECAUTIONS

Before you use your absorption minibar, please read this instruction manual carefully. Use this appliance only for its intended purpose as described in this owner's manual.

- 1 This minibar must be properly installed in accordance with the installation instructions before it is used.
- 2 Do not use mechanical devices or other means to accelerate the defrosting process.
- 3 Do not damage the refrigerant circuit.
- 4 Do not use electrical appliances inside the food storage compartments of the appliance, unless they are the type recommended by the manufacturer.
- 5 When positioning the appliance, ensure the supply cord is not trapped or damaged.
- 6 Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.
- 7 Please keep the product away from fire or similar glowing substances before you dispose of the refrigerator.
- 8 Please remove the door before you dispose the refrigerator.
- 9 The appliances must be positioned so that the plug is accessible
- 10 The appliance shall be installed in accordance with the national wiring regulations.
- 11 The appliance is intended to be used in households and similar applications, such as:
 - Staff kitchen areas in shops, offices and other working environments
 - farm houses and by clients in hotels, motels and other residential-type environments
 - bed and breakfast type environments
 - catering and similar non-retail applications
- 12 Never unplug the absorption minibar by pulling on the power cord. Always grasp the plug firmly and pull straight out from the wall outlet.
- 13 Repair or replace immediately the power cords that have become frayed or otherwise damaged. Do not use a cord that shows cracks or abrasion damage along its length, the plug or the end of the connector.
- 14 Remove the power plug from the socket, cleaning or before making any repairs. Contact your local JVD representative to conduct any repairs.
- 15 Do not operate the minibar in the presence of explosive fumes.
- 16 The power supply must be properly grounded. Do not use an adapter plug or extension cord.

- 17 Do not use the unit near the bath or shower area or near the swimming pool.
- 18 Do not store food in the absorption minibar, as the interior temperature may not be cool enough for such storage.
- 19 The appliance is not to be used by people (including children) with reduced physical, sensory or mental capabilities, or a lack of experience and knowledge, unless they have been given supervision or instruction.
- 20 Children being supervised not to play with the appliance
- 21 Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- 22 If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified people to avoid a hazard.

INSTALLATION

It is advisable to clean the inside of the absorption minibar with lukewarm water using a mild detergent, and then to dry it thoroughly prior to use.

The temperature in the appliance will depend on:

- The ambient temperature of the location where the minibar is located
- The frequency and duration of periods when the door is open
- The number of contents in the fridge

It may therefore be necessary to adjust the thermostat from time to time. The cabinet's refrigeration system is designed to operate when the cabinet is located on a flat surface. Avoid tilting the cabinet side.

If the cabinet must be tilted on an angle for handling or moving purposes, allow it to sit in an upright position 20 to 30 minutes prior to plugging it in and starting the cooling of the storage compartment.

Grounding plug and socket should be provided in accordance with local regulations. The cable size should meet the refrigerator's requirements. They must be connected to the proper electrical voltage.

HOW TO OPERATE THE MINIBAR

1. Insert the power plug into a suitable wall outlet.
2. Ensure minibar is placed on a level surface.
3. To adjust the temperature, turn the thermostat knob located at the lower rear exterior of the minibar to the 10 o'clock position.
4. The internal temperature can be adjusted between 'H' (High) and 'L'

5. (Low), where 'L' — corresponding to the 10 o'clock position — provides the coldest setting.
6. The 'H' setting, approximately at the 8 o'clock position, is typically used in colder climates where ambient temperatures are below 0°C.
7. Adjust the thermostat knob as required to achieve the desired internal temperature.
8. Turn ON the power switch and allow approximately 6 hours for the minibar to reach its optimal cooling temperature before placing any items inside.



COLD 'L' Setting



WARM 'H' Setting

TECHNICAL SPECIFICATIONS

Product code: CM-40, CM40 GD

Capacity: 40L

Supply voltage: 220-240V~ 50/60HZ

Rated Power: 58W

Product Dimensions: W400/D425/H560


Cooling system: Thermo-absorption

Refrigerant: R600a

Foaming gas: Cyclopentane

Defrosting: Auto

CIRCUIT DIAGRAM

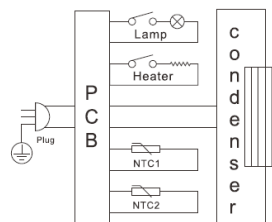

TIPS FOR SAVING ENERGY

1. The minibar should be in the coolest area of the room, away from heat-producing appliances, and out of the direct sunlight.
2. Overloading the minibar forces the thermoelectric cooling system to run longer.
3. Reduce door openings and extended searches, remove as many objects as needed at one time, and close the door as soon as possible.
4. One characteristic of heat-pipe units is the length of time they require to compensate for many door openings in a short time interval. It may be necessary to wait longer until the temperature returns to its former level. This is normal for this type of appliance.
5. Heat-pipe technology is energy-saving. It is environment-friendly due to the resignation of CFC.

TROUBLESHOOTING GUIDE


Minibar not working or cold	Is the minibar connected to the electrical outlet?
	Is the power switched ON?
	Is the LED light in the minibar lit?
	Is the ambient temperature too high?
Minibar Internal temperature not cold	Is the door gasket in good condition and is sealed properly?
	Is the ventilation in accordance with the requirements? (Refer to the ventilation guide)
	Is the ambient temperature too high?
	Is the temperature knob located at the back of the minibar turned to the cold?

VENTILATION GUIDE/REQUIREMENT

To ensure the proper function of the refrigerator, please observe the following recommendations.

1. To ensure circulation, the unit should be kept at least 10 cm away from the sides of the minibar, 15cm away from the top and at least 15 cm away from the rear of the minibar. This will allow the minibar to operate optimally.
2. Locate the unit away from direct sunlight. This will enable you to obtain the best performance and save energy.

3. Under no circumstances should the top grid be covered by any object. It will hinder air circulation.

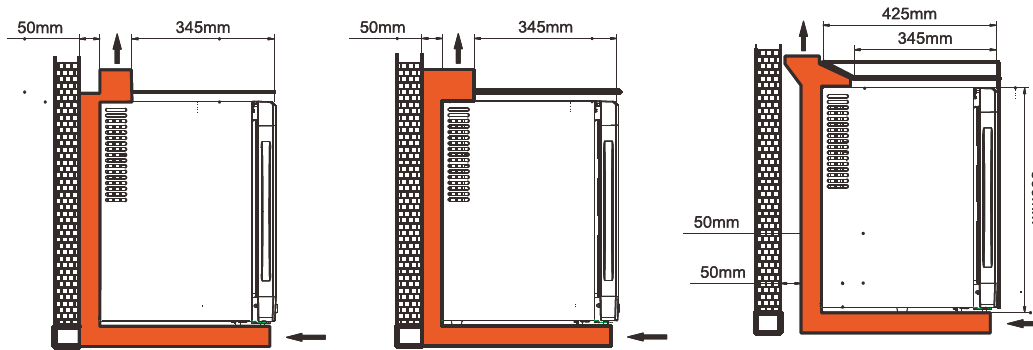

CARE AND CLEANING

Warning: To avoid electric shock, always unplug the equipment before cleaning.

General guide: Do not use harsh chemicals, abrasives, ammonia, chlorine bleach, concentrated detergents, solvents or metal scouring pads to clean the minibar. These chemicals may dissolve, damage and/or discolor the appliance.

1. Empty the contents of the appliance
2. Wipe the inside and outside surfaces with a damp cloth. The addition of vinegar to the water is good for the prevention of mold and fungus.
3. Wipe all parts thoroughly after the cleaning with a dry cloth.

IMPORTANT:

When the minibar is not in use, it must be completely dry inside to avoid mold growth.

REVERSING THE DOOR (OPTION) - How to reverse the door

- Remove the lower hinge by loosening and removing the screws with a screwdriver. Carefully lower the door and remove it.
- Remove the top hinge cover and screws from the top hinge position, and then remove the hinge.
- Remove the opposite side of the cover for the top hinge and insert the cover on the opposite side.
- Take off the lower hinge and fix it to the opposite side.
- Take the door and insert the lower hinge axle into the opposite bottom hole of the door.
- Fix the top hinge to the opposite top position of the minibar. Adjust the door to make it straight and in alignment with the cabinet.

Note: After reversing the door, the gasket/seal may have shifted, and it needs

to be readjusted. Ensure the gasket is properly sealed and adjusted before turning on the minibar.

Warranty Statement

LIMITED WARRANTY

JVD warrants the machine to be free from defects in workmanship and materials for a period as stated in the purchase contract/ agreement. This limited warranty does not cover damage or problems that result from:

- External causes such as accident, abuse, misuse, or problems with electrical power.
- Servicing, alteration, or modification not authorized by JVD or its respective service agent/ distributor.
- Usage that is not in accordance with product instructions
- Use of parts and components not supplied by JVD
- Acts of God, fire, flood, war, act of violence or any similar occurrence.

JVD's responsibility for malfunctions and defects is limited to repair and replacement as set forth in this Warranty Statement. All express and implied warranties for the product, including but not limited to any implied warranties and conditions of merchantability and fitness for a particular purpose, are limited in time to the term of the limited warranty period as specified in the sales contract/agreement. No warranties, whether express or implied, will apply after the limited warranty period has expired.

WE DO NOT ACCEPT LIABILITY BEYOND THE REMEDIES PROVIDED FOR IN THIS LIMITED WARRANTY. JVD OR ITS APPOINTED DISTRIBUTORS SHALL NOT BE LIABLE FOR ANY LOSS OF OR DAMAGE TO ANY PROPERTY OR INJURY TO OR DEATH OF ANY PERSONS CAUSED BY ANY NEGLIGENT ACT OR OMISSION OR WILFUL MISCONDUCT OF THE USER. WE ALSO DO NOT ACCEPT ANY LIABILITY FOR THIRD-PARTY CLAIMS AGAINST YOU FOR DAMAGES, FOR PRODUCTS NOT BEING AVAILABLE FOR USE, OR FOR ANY LOST OF PROPERTY.

Correct Disposal of this product



This marking indicates that this product should not be disposed of other household waste throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.