

WAVE PRO

Station réveil avec chargeur sans fil
Lecteur Musique Bluetooth



Notice original

Dernière mise à jour : 08/07/2025



3 RUE DES BRECHES – 44400 REZE - FRANCE

Tél. +33 (0)2 40 75 98 20

www.jvd.fr

AVANT TOUTE INSTALLATION BIEN LIRE L'ENSEMBLE DE CETTE NOTICE

MESURES DE SECURITE IMPORTANTES

- **L'installateur doit respecter les normes d'installation en vigueur dans le pays à la date de l'installation.**
- **Avant utilisation, s'assurer que la tension nominale indiquée sur l'appareil correspond bien à la tension du secteur.**
- **Si le câble d'alimentation est endommagé, il doit être remplacé par le fabricant, son service après-vente ou des personnes de qualification similaire afin d'éviter un danger.**
- **Ne pas laisser le câble d'alimentation tiré ou écrasé par une lourde charge.**
- **Ne jamais immerger le câble d'alimentation, la prise et l'appareil dans de l'eau ou dans tout autre liquide pour éviter le risque causé par l'électrocution.**
- **L'appareil peut être utilisé par des enfants d'au moins 8 ans et par des personnes dont les capacités physiques, sensorielles ou mentales sont réduites ou qui manquent d'expérience et de connaissances, si elles sont surveillées, si elles ont reçu les instructions sur l'utilisation de l'appareil en toute sécurité et si elles ont conscience des dangers encourus.**
- **Le nettoyage et l'entretien ne doivent pas être effectués par des enfants, sauf s'ils ont 8 ans ou plus et s'ils sont surveillés.**
- **Tenir l'appareil et son cordon hors de portée des enfants de moins de 8 ans.**
- **Cet appareil est destiné à être utilisé dans des applications domestiques et analogues telles que :**
 - **Des coins cuisines réservés au personnel dans des magasins, bureaux et autres environnements professionnels**
 - **L'utilisation par les clients des hôtels, motels et autres environnements à caractère résidentiel ;**
 - **Des environnements du type chambres d'hôtes**
- **Ne branchez l'adaptateur que sur des connexions secteur adaptées, facilement accessibles et mises à la terre.**
- **Gardez l'adaptateur à l'écart de la chaleur et des zones humides.**
- **Si l'adaptateur est endommagé, il doit être remplacé par une personne qualifiée.**
- **Pour éviter des dommages dangereux, ne placez jamais l'appareil sur ou à côté de zones chaudes ou humides.**
- **Protégez l'horloge des effets directs du soleil, des éclaboussures d'eau et de l'humidité.**
- **Placez l'appareil toujours sur une surface horizontale, stable et plane pour l'empêcher de basculer.**
- **Éteignez l'horloge lorsque vous ne l'utilisez pas pendant une**

longue période. Déconnectez en tirant sur le l'adaptateur et non en tirant sur le cordon lui-même, sinon il risquerait d'être endommagé.

- Avant le nettoyage et l'entretien, veuillez débrancher l'adaptateur de la prise de courant.
- Protégez l'horloge des effets directs du soleil, des éclaboussures d'eau et de l'humidité.

CARACTÉRISTIQUES TECHNIQUES

- Tension d'entrée : 100V-240V, 50-60Hz,
- Tension de sortie: 9V,3.5A
- Haut-parleur: 1 x 5W
- Version Bluetooth: 5.0
- Fréquence: 2402 ~ 2480 MHZ
- Puissance de charge: 10 W
- Portée Bluetooth: jusqu'à 10 m
- Puissance de charge: 10W
- 2 sorties USB-C: 2.1A
- Batterie au lithium rechargeable: 3,7 V / 2000 mAh
- Dimensions: H.69 / L.130 / P.90mm

ACCESSOIRES

- Adaptateur de charge
- Câble AUX
- Mode d'emploi




MISE EN MARCHÉ




Maintenez le bouton  enfoncé pendant 3 secondes pour activer le réveil

REGLAGE DE L'HEURE DE L'HORLOGE

L'heure est au format 24h




Maintenez le bouton  enfoncé pendant 6 secondes.

Les heures clignotent. Appuyez sur  ou  pour régler et appuyez sur  pour valider.


Les minutes clignotent. Appuyez sur  ou  pour régler et appuyez sur  pour valider.




REGLAGE DE L'ALARME (ALARME NON REPETEE)

Appuyer sur  une fois et l'heure de l'alarme précédente apparaît. L'HEURE clignote. Appuyez sur  ou  pour régler. Appuyez sur  pour valider.

Les MINUTES clignotent. Appuyez sur  ou  pour régler. Appuyez sur  pour valider.

L'alarme est enregistrée et le symbole  est affiché à côté de l'heure.

Pour annuler l'heure de l'alarme en cours de réglage, appuyez sur  une fois sur le bouton.

Le symbole  de l'alarme et l'heure à l'écran disparaissent. Pour annuler les réglages de l'heure de l'alarme à tout moment avant que l'alarme ne se déclenche, appuyez simplement une fois sur . Le symbole  d'alarme et l'heure à l'écran disparaissent.



FONCTION DE RÉPÉTITION

Lorsque l'alarme sonne, une mélodie commence doucement et se répète à volume croissant. Il y a 2 réponses possibles :

· Annuler l'alarme

Appuyez sur n'importe quel bouton à l'exception du bouton, l'alarme est annulée et le symbole à l'écran disparaît.

· Activer la fonction de répétition snooze (ZZZ)

Appuyez sur le bouton  pour activer la fonction de répétition. Le symbole ZZZ apparaîtra sur l'écran à côté du symbole . L'alarme retentira à nouveau 9 minutes plus tard.

Un maximum de 3 tentatives de répétition est autorisé avant que l'alarme ne soit annulée.

Appuyez sur le bouton  et maintenez-le enfoncé pendant 3 secondes pour annuler la fonction Snooze.

CHANGER LA MUSIQUE ET RÉGLER LE VOLUME

Appuyez une fois sur  pour augmenter le volume

Appuyez une fois sur  pour diminuer le volume

Appuyez et maintenez  pendant 3 secondes pour changer de station en avant

Appuyez et maintenez  pendant 3 secondes pour changer de station en arrière

Appuyez sur  pour lire ou mettre en pause.

LECTEUR DE MUSIQUE BLUETOOTH ET FM

Appuyez sur  une fois

L'écran affiche  et clignote

Le téléphone mobile de l'utilisateur affichera «JVD WAVE PRO» sous Bluetooth Network

Connectez-vous à «JVD WAVE PRO» et  arrête de clignoter avec une tonalité de confirmation

Écoutez de la musique avec le téléphone ou tenez une conversation avec le haut-parleur via le microphone intégré MIC

Éteignez  pour déconnecter le téléphone du JVD WAVE PRO

Bluetooth s'éteindra automatiquement après 5 minutes s'il est laissé déconnecté

READ THESE INSTRUCTIONS CAREFULLY BEFORE THE INSTALLATION

IMPORTANT SAFETY PRECAUTIONS

- **The installer must comply with the installation standards in the country at the time of installation.**
- **Before use, ensure the rated voltage indicated on the appliance match the supply voltage.**
- **If the supply cord or the adaptor are damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard**
- **Do not keep the power cord pulled or depressed with any heavy load.**
- **Keep the adaptor and the power cord away from heat and damp areas.**
- **Do not connect any other appliances on the same line. It may result in overheating and fire**
- **Never immerse the power cord, plug and application into water or any other liquid to avoid danger caused by electrical.**
- **Do not operate or place the appliance on or near any hot surface (such as gas or electrical or electrical burner or in a heated oven).**
- **Never disassemble your appliance and replace internal components to protect from any dangers.**
- **To protect against fire, do not operate in presence of explosive and / or flammable fumes.**
- **This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.**
- **Cleaning and user maintenance shall not be made by children.**
- **Keep the appliance and its cord out of the reach of children under 8 years old.**
- **Children shall not play with the appliance.**
- **Incorrect use of the appliance, or use in contradiction with this manual, presents the danger of burns or electrocution.**
- **Do not use the power adapter beyond the specified range.**
- **This device is intended for use in domestic and similar applications such as:**
 - **Kitchen corners reserved for staff in shops, offices and other professional environments**
 - **The use by customers of hotels, motels and other residential environments**
 - **Bed and Breakfast type environments.**

- To avoid dangerous damage, never place the device on or near hot or humid areas.
- Protect the device from direct sunlight, splashing water and humidity.
- Always place the device on a horizontal, stable and level surface to prevent it from tipping over.
- Turn off the device when you don't use it for a long time. Disconnect by pulling on the adaptor, not by pulling on the cord itself, otherwise it may be damaged.
- Before cleaning and maintenance, please unplug the adaptor from the power outlet.
- For indoor use only

TECHNICAL CHARACTERISTICS

- Input 100V-240V, 50-60Hz, 9V3.5A
- Speaker output: 1 x 5W
- Bluetooth version: 5.0
- Frequency: 2402 ~ 2480MHz
- Bluetooth range: up to 10m
- Qi wireless charging output :10W
- Dual Type 'C' USB Output: Up to 2.1A
- In-built rechargeable polymer Li-ion battery: 3.7V / 2000mAh
- Dimensions: H.69 / L.130 / P.90mm

ACCESSORIES

- AC charging adaptor x1
- AUX cable
- Instructions manual

SWITCH ON

Press and hold  for 3 seconds to turn on the unit

SETTING THE CLOCK TIME

The time is on a 24h-hour format

Press and Hold  for 6 seconds

The HOUR digit flashes. Press  or  to adjust and press  to confirm

The MINUTE digit flashes. Press  or  to adjust and press  to confirm

Clock Time is displayed.




SETTING THE ALARM CLOCK TIME (one-off alarm, not daily)

Press  once and the previously set alarm timing appears

The HOUR digit flashes. Press  or  to adjust and press  to confirm

The MINUTE digit flashes. Press  or  to adjust and press  to confirm

Clock Time is displayed.

The  symbol is displayed besides the Alarm Time set. To cancel the Alarm Time in the midst of setting it, press  button once. The  symbol and Alarm Time on the screen will disappear.

To cancel the Alarm Time settings anytime before it rings, simply press the  once. The  symbol and Alarm Time on the screen will disappear.

ALARM CLOCK ACTIVATION

When the alarm clock rings, a soft melody tune will start soft and repeats in an ascending volume. There are 2 responses possible.

• Cancel alarm

Press any button except '  ' button, alarm is cancelled and the  symbol on the screen will disappear.


• Activate the snooze (Zzz) snooze function

Press  button to activate snooze function.

Zzz symbol will appear on the screen beside the  symbol.

Alarm will ring again 9 minutes later.

A maximum of 3 snooze attempts is allowed before alarm is cancelled.

Press and Hold  button for 3 seconds to cancel the Snooze function.

MUSIC TRACK SWITCHING AND ADJUSTING VOLUME

Press  once to adjust volume upwards

Press  and hold for 3 secs to switch channels forward

Press  once to adjust volume downwards

Press  and hold for 3 seconds to switch channels backwards


Press  to play or pause.

BLUETOOTH CONNECTIVITY AND FM CONNECTIVITY

Press the  once

Screen shows  and flashes

Connect to 'JVD WAVE PRO' under Bluetooth Network

Connect to 'JVD WAVE PRO' and  stops flashing with acknowledgement tone

Play Music with the phone or hold a speaker conversation via the in-built MIC

Turn off  to disconnect phone from 'JVD WAVE PRO'

Bluetooth will automatically turn off after 5 minutes if it remains unconnected


Press the  a second time to get into FM

Screen shows FM and flashes

Press and Hold  for 3 seconds to auto-scan for available FM channels.

For best FM channel reception, please attach the AUX antenna cable to the unit.

LIGHT DIMMER

Press  and hold 3 seconds each time to adjust the brightness of the screen display.

There are 4 level of brightness.

AUX CONNECTIVITY

Attach Aux cable to mobile device to play music via mobile device
AUX symbol appears

WIRELESS CHARGER

After the alarm clock is connected to the power supply, wireless charging can be used normally.

Simply place the mobile phone (supporting wireless charging) on the charging platform.


MAINTENANCE

Before cleaning and maintenance, please unplug the adaptor.

Do a cleaning every month avoiding the use of chemicals. Prefer a slightly damp cloth to clean the surface of the clock.

If the station is found to be defective, please contact your authorized JVD distributor for advice.

Do not attempt to disassemble the device unless instructed by JVD authorized personnel.

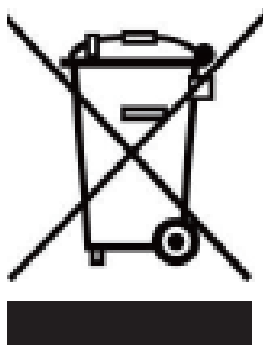

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Faulty connection or any damage resulting from wrongly usage or which is in contradiction to the instructions in this leaflet will render the guarantee void.

This equipment complies with the regulations in European directives RED 2014/53/UE, 2014/30/UE, 2014/35/UE and 2011/65/EC